


Join the Repair Community - Create Account



HP Envy TouchSmart 15 CMOS Battery Replacement



What you need

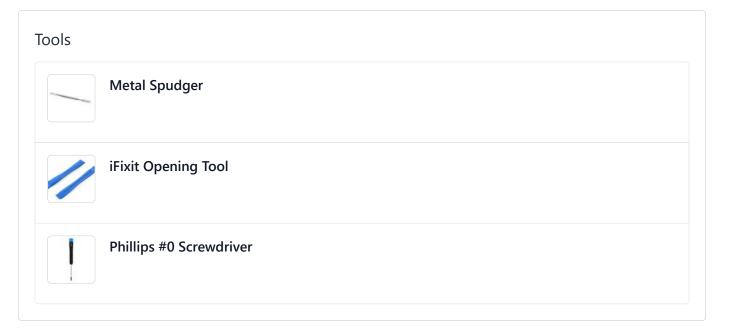

Go to step 1 ↓

Introduction

Upon boot up, the computer may read a "CMOS checksum error," or date and time keep getting reset. If this is the error you are receiving you should replace your CMOS Battery.

Step 1 Battery



Press
the
battery
release
tab
and
the
battery
will
pop
up.

Add a comment



Remove the battery from the laptop, it will come out easily.

Add a comment

Step 3 Accessory Plate




Add a comment




Add a comment

Step 5 CMOS Battery

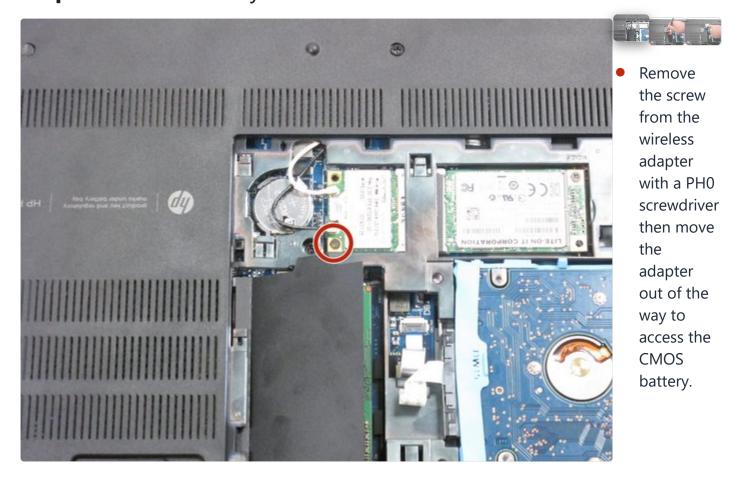

Add a comment

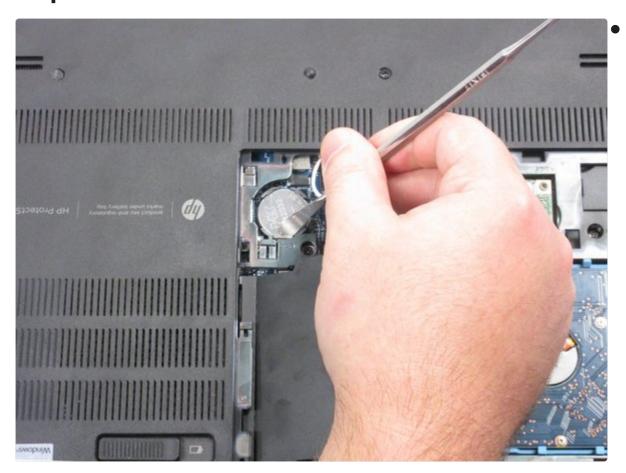

Use a plastic or metal spudger to release the CMOS battery from the clips.

Add a comment



Add a comment

⋈ CONCLUSION


To reassemble your device, follow these instructions in reverse order.

✓ Give the author +30 points!

One other person completed this guide.

Gear Up For Future Repairs

Shop all

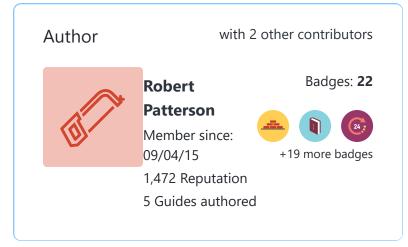

Team



USF Tampa, Team 2-6, Sullivan Fall 2015

USFT-SULLIVAN-F15S2G6

4 Members

10 Guides authored

0 GUIDE COMMENTS

 \bigcirc

Add a comment

Add Comment

Post comment

View
Statistics:

Past 24 Hours:

Past 7 Days:

Past 30 Days: 19 All Time:

7,910